

MannMade USA

2020 ClassicVibrato Bridge Mounting Instructions

For Installation by Skilled & Authorized Technicians Only!

MannMade USA not responsible for damage caused by incorrect installation


Retrofit Installation: for direct installation on Strat - style Guitars

- Remove strings, bridge and associated hardware.
- Check mounting hole sizes to verify they match holes sizes per template instructions below.
- Install new MannMade USA 2020 ClassicVibrato Bridge using hardware included.
- Start with the two (2) mounting posts into the existing threaded inserts to obtain desired bridge height. (Suggested float is 1/16" above guitar body).
- Inspect and double check to verify that both posts are adjusted so that the shaft v-grooves are exactly the same height. An incorrect adjustment could easily ruin your new bridge!
- Install new claw (if necessary) and the return springs, adjust to desired tension.
- String up guitar, tune to pitch and test for smoothness and accuracy of return to "zero position".
- Repeat any of the above steps as necessary. **DO NOT** adjust the mounting screws with strings at full tension!!! Detune guitar!!!

New Installation: For custom or un-routed guitars.

- Route cavity to standard Fender Strat vibrato cavity
- Refer to template instructions below.
- Install bridge per "Retrofit Instructions" above.

"Fender" and "Strat" are registered trademarks of Fender and are not affiliated with MannMade USA.

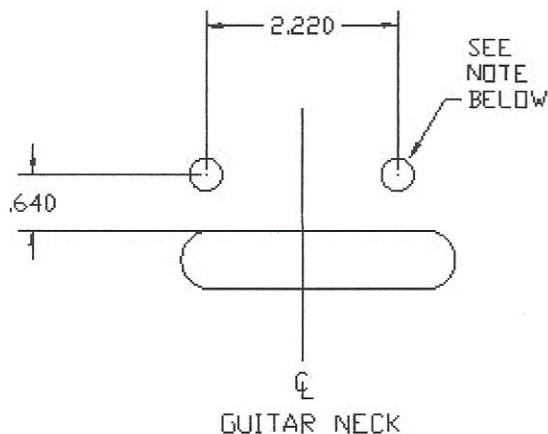

DRILL 3/8" x .875 MIN DEPTH - 2 PL